GSLOT
REAL MOTOR SPORTS HOBBY

SLOT CARS JAPAN

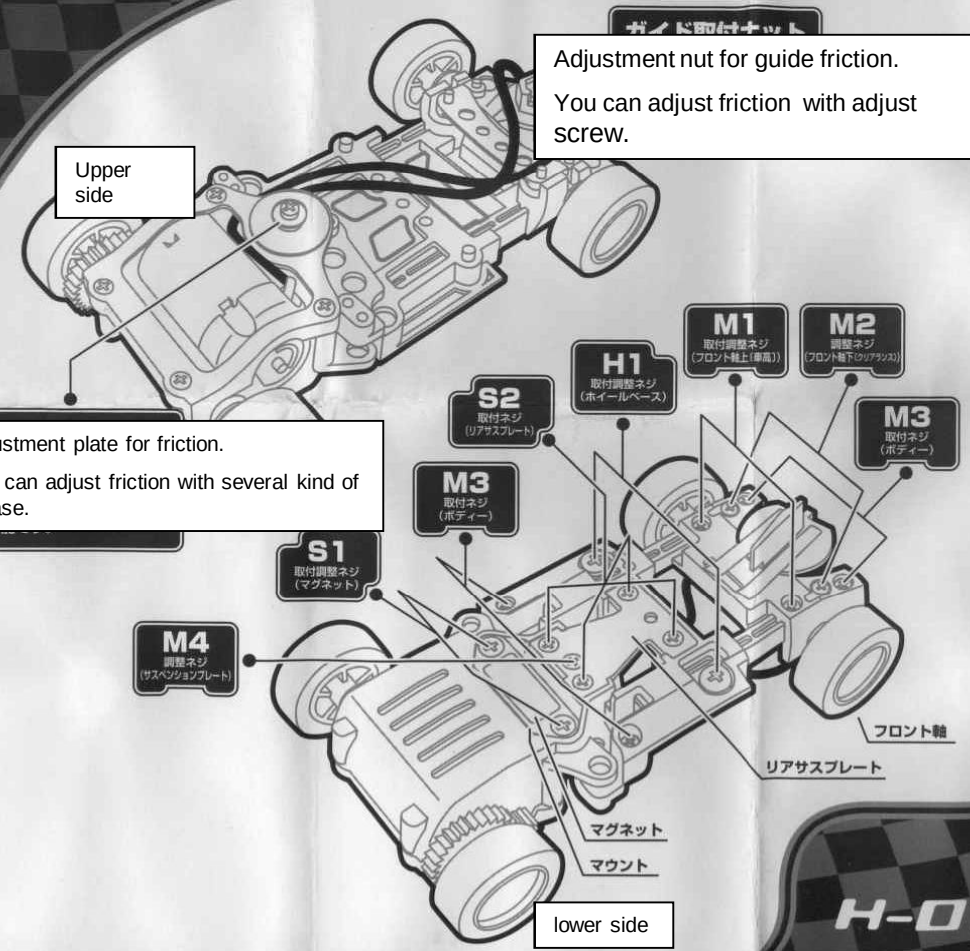

Upper side

Adjustment nut for guide friction.

You can adjust friction with adjust screw.

Adjustment plate for friction.

You can adjust friction with several kind of grease.

lower side

S1 取付調整ネジ (マグネット)

Adjustment screw for magnet.

You can adjust hight of magnet. If you change direction with remove the mount, you can adjust longitudinal position.

S2 取付ネジ (リアサスプレート)

The screw for fixing rear suspension plate.

M1 取付調整ネジ (フロント軸上(車高))

Adjustment screw for front axle

You can adjust hight of car with adjust position of upper parts for axle.

M2 調整ネジ (フロント軸下(クリアランス))

Adjustment screw for front axle

You can adjust clearance of axle with adjust position of lower parts for axle.

M3 取付ネジ (ボディー)

The screw for fixing body.

M4 調整ネジ (サスペンションプレート)

Adjustment screw for roll and pichting

You can adjust roll and pitching with adjust screw

H1 取付調整ネジ (ホイールベース)

Adjustment screw for wheel base.

You can adjust wheel base to fit body.

H-01 Chassis 調整方法

★

© 2008 WIZ

GSLOT®
REAL MOTOR SPORTS HOBBY

SLOT CARS JAPAN®

本商品は出荷時デ…ラプレイ用のタイヤを装着しています。
走行時には同…ください。

You should change tire from for display to for running

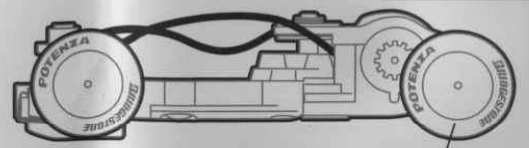

Display tire

タイヤ 23mmφ

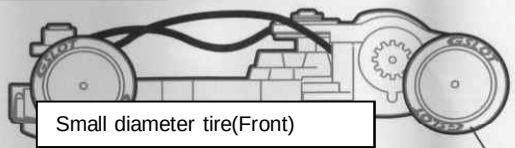

Small diameter tire(Front)

小径タイヤ（フロント）装着時 20mmφ
小径タイヤ（リア）装着時 21mmφ

Small diameter tire(Rear)

タイヤ交換方法

How to change tire

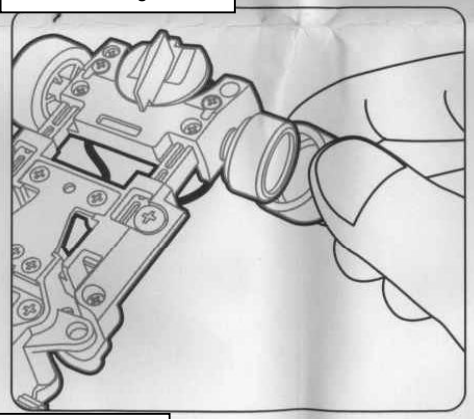

Please make sure size of tire. Front and Rear is different!

イールから外して付け替えてください。
はフロントとリアで大きさが
してください。

タイヤ交換後の調整

●タイヤ交… 整が必要です。
走行時、タ…。

After changing tire It is needed to adjust front hight and magnet hight.

Front hight

Magnet hight

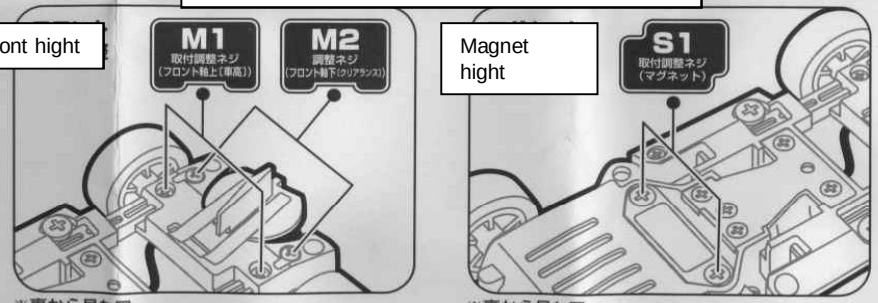

※裏から見た図　※裏から見た図

※別途付属の調整方法マニュアルを参照してください。

タイヤ交換方法

© 2008 WIZ